

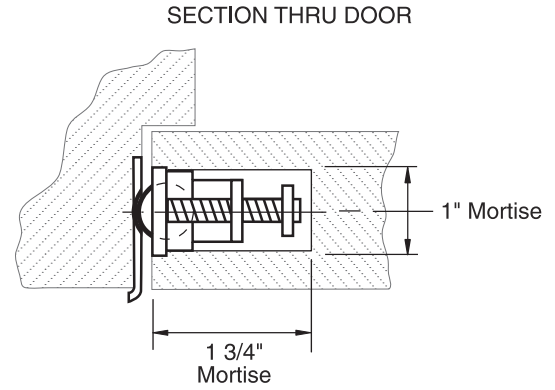


### RL1, RL1A, RL1B ROLLER LATCH

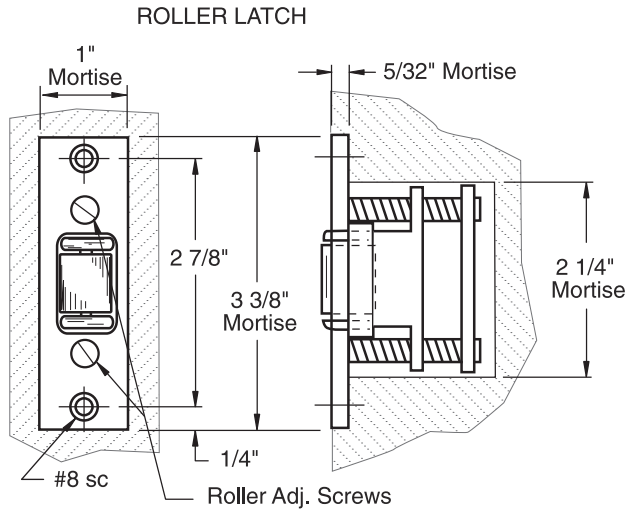


**NOTE:**  
 - Mortise dim's used only on wood doors.  
 - Latch should be centered in width of door.


**RL1A ROLLER STRIKE**

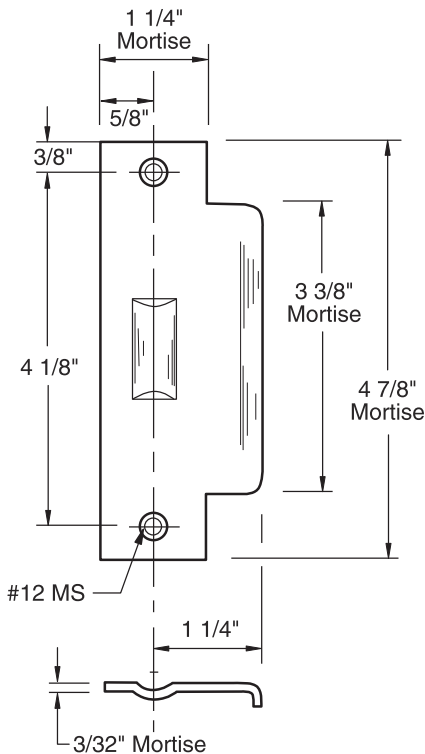

**RL1B ROLLER STRIKE**

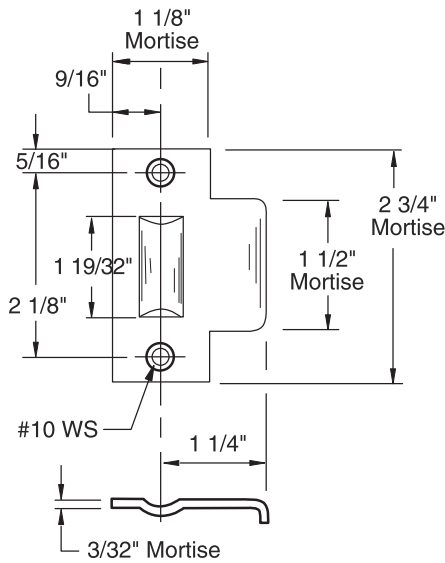

**RL1 ROLLER STRIKE**

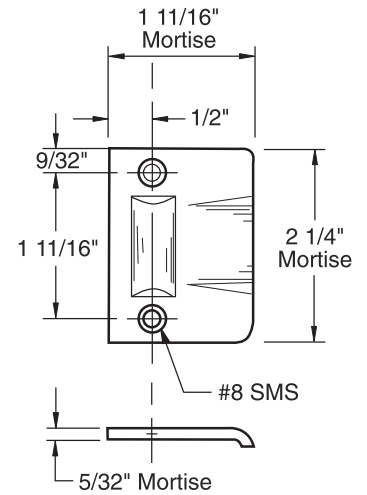

**INSTALLATION INSTRUCTION RL1, RL1A, RL1B-09**

Copyright © 2009 McKinney Products Company, an ASSA ABLOY Group company. All rights reserved. Reproduction in whole or in part without the express written permission of McKinney Products Company is prohibited.